


## Emerald K6 ECU Relay Connections

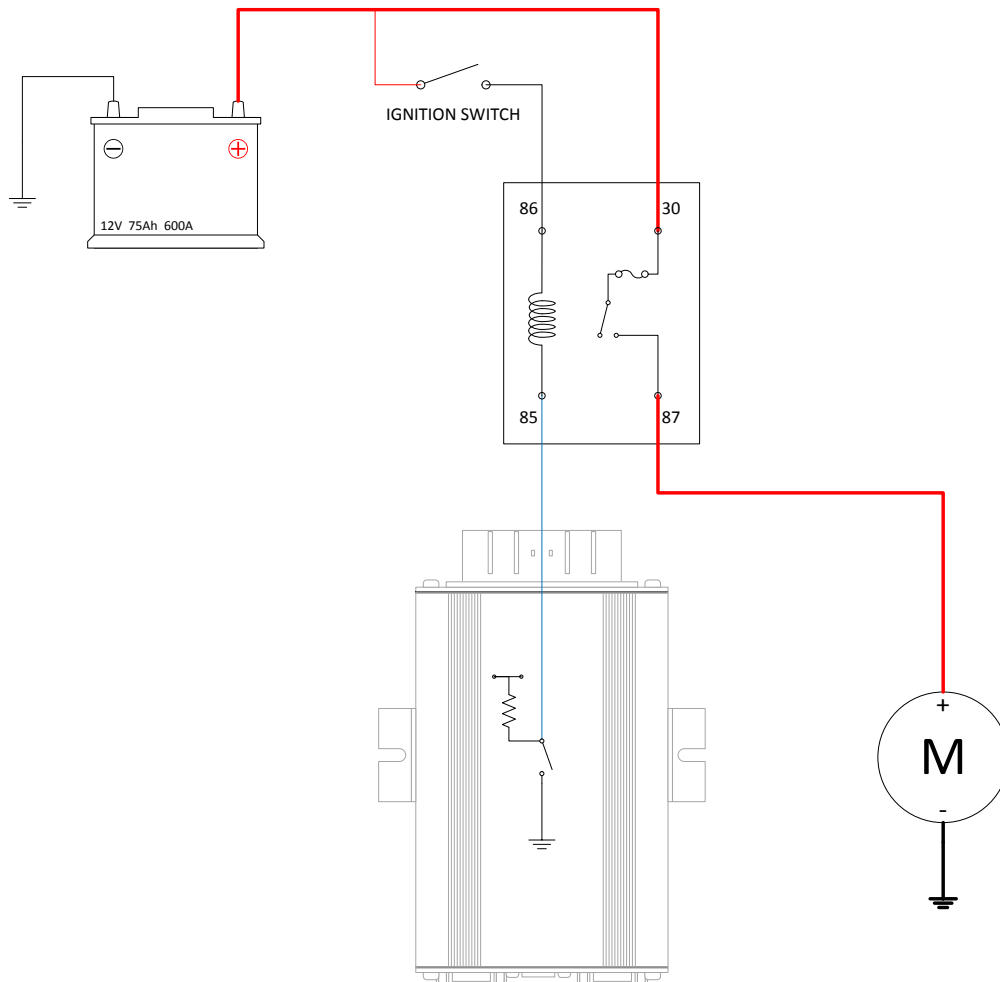

Relay Pin #	Function	Connection
30	+12v Battery	+12v Battery
85	Coil ground	*ECU switched ground
86	Coil +12v	K6 ECU pin 11 (Ignition +12v)
87	Relay output	To fuel pump etc.

\*for example: pin 6 for a cooling fan; pin 20 for a fuel pump etc.